

THE UNIQUE MOMENT, THE EXTRAORDINARY ATMOSPHERE, THE SPECIAL MOTIF: THE PERFECT PHOTO.



Breathe in the nature and enjoy the extraordinary atmosphere// Every trekking tour leaves its mark on our personalities. The reminiscing the self-reflection is an important part of our outdoor activity. But sometimes it's not enough to experience atmospheres and images. Especially when we find ourselves in a beautiful landscape, we want to transfer the experience as a vivid memory into our everyday lives. Today, the offer of equipment is as varied as the requirements of the outdoor

family: small digital cameras to document the tour, compact camcorder for the film community, semi-professional reflex camera systems or extensive tools of the trade for professional photographers.

All of these products – whether small or large or for the amateur photographer or the professional – have one thing in common: they are highly sensitive and need a suitable 'safe' for transport during wind and rain.



Find out more online:
www.tatonka.com





THE DIGITAL MOMENT, PRESERVED ON THE DATA STORAGE DEVICE, PROTECTED IN A FIRST-CLASS SAFE: TATONKA MULTIMEDIA EQUIPMENT



A CAMERA SHOULD ALWAYS BE CLOSE TO HAND, AS SOMETIMES THE PERFECT MOMENT IS OVER FASTER THAN YOU'D THINK.



As a manufacturer of outdoor products, we know what a camera bag has to withstand //Our catalogues, full of outdoor photographs, are proof that our photo equipment always had a safe home. Sandstorms, rain, temperature drops – even when the weather was really pulling out all the stops, our photographer was particularly motivated to shoot the perfect picture. Even though the camera bag sometimes landed on sharp-edged rocks or soaking wet, marshy soil.

Three aspects are particularly important for our product developers of the **TATONKA** multimedia collection.

Firstly: the first-class perfectly fitting padding of the sensitive equipment. **Secondly:** the robust outer cover as protection against the elements. **Thirdly:** the optimum manageability, so that everything can be accessed easily and quickly.

All standard camera models are taken into consideration by **TATONKA** during the product development. The inner compartments of the bags allow **maximum flexibility** and can therefore be **individually adapted** to your personal equipment. Thanks to sensible feature details, our products – and also you – gain a real added value: in our large photo rucksack this would be, for example, the special tripod carrying system, the countless compartments for memory cards and other small items, the dust protection flap or the rain cover. Even the smallest product is well thought-out and has proven itself during the many test tours. Read the product descriptions through carefully for yourself, your valuable equipment will thank you for it.



Quick Access Pack M

This small photo rucksack can be carried as a diagonal 'sling bag' and guarantees fast access to your camera and lenses, without having to take off the rucksack.



040



Quick Access Pack M Small photo rucksack with fast access. Thanks to the detachable, adjustable straps, the Quick Access Pack can be carried as a diagonal “sling bag” and thereby ensures fast access to your camera and lenses, without having to take off the packsack. The waist strap is detachable, and direct access to your camera is guaranteed with two additional zips. The rucksack also has a small zip front pocket and another compartment at the top, with space for photo accessories like memory cards, lens cleaning brush or batteries.

Features: Fully padded photo compartment Space for one case incl. lens and another zoom lens or two macro or normal sized lenses Space for memory cards, batteries, flash and accessories Two separate access options Detachable waist strap Small zip front pocket Rain cover

Material: Textreme 6.6, Texamid 11.1



Quick Access Pack M

3020



040 black



46 × 26 × 15 cm (photo compartment 26 × 25 × 14 cm)



25 l



1,20 kg



•



DSLR Pack

Professional photo rucksack with all the trimmings. Large, professional photo rucksack with all-round padding and individually adjustable compartments, and plenty of room for more cameras and lenses. And when it comes to accessories, the DSLR Pack has an integrated tripod carrying system and plenty of pockets and compartments for memory cards, batteries, cables and all your other equipment. The construction of the DSLR Pack is also remarkable. Its ergonomically shaped carrying system with strong aluminium rods lies well against the back, and access to the main compartment is at the back. This may not sound spectacular, but it is. As the carrying system is not in the dirt when you open it, no dust can get inside when you close it. And talking of dust: the dust protection zip and rain cover offer effective protection against external influences.

Features: All-round padding Ergonomic carrying system Space for several cameras, lenses and accessories Backwards facing access to the main compartment Padded S-shaped shoulder straps Lower flap dust protection Compartments for cables and small items Quick access chip compartments Hip belt pockets Two front pockets (one fully opening with organiser, one outer) Detachable hip strap Aluminium profile pole for back shape and stability Rain cover Tripod carrying system with non-slip hypalone flaps and fold-in side pocket

Material: Textreme 6.6, Snow Crust



No								
DSLR Pack	3008	040 black	343 khaki	55 × 37 × 20 cm (inside 51 × 33 × 15.5 cm)	28 l	2,95 kg	•	•





343



040



040

City Shot Discreet photo case for SLR cameras. All-round padded photo case that “hides” itself behind a classic travel/city bag. Although it has the advantage of carrying the main items of equipment for an SLR camera professionally and safely, it is discreet enough to use easily for every-day without tempting would-be thieves. City Shot has a variable interior with Velcro attachments, water-repellent zips and an attachment for a small tripod. The open lid can be secured with press studs for added ease, and there is a zip pocket with organiser underneath.

Features: All-round padding Adjustable compartment sizes for different cameras Zip access Lower flap dust protection Inner compartment and outer pocket for memory cards and accessories Attachment and easy access for a small tripod Pocket in flap Padded adjustable shoulder strap Detachable waist strap **Material:** Textreme 6.6, 420 HD Nylon Oxford





3 l / 343

4 l / 040



4 l / 343




4 l / 040

Digi Focus 2/3 Wedge-shaped photo case for an SLR plus lens.

Padded shoulder bag especially designed for an SLR camera with fitted lens. The Digi Focus comes with an all-round carefree feeling thanks to the secure belt attachment, zip fastener to protect the camera against dust, and a rain cover for sudden changes in the weather.

Features: All-round padding Height-adjustable Velcro bridges Lower flap dust protection Belt attachment Rain cover Two individually adjustable inside pockets Inside lid pocket **Material:** Textreme 6.6, Snow Crust

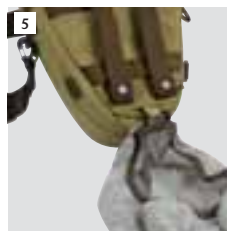

Digi Focus 4 Strong photo bag for SLR camera plus lens plus interchangeable lens. For all of those who like to keep all photographic options open when they're on tour, there is Digi Focus 4. The all-around padded shoulder bag is not simply a larger style of the Digi Focus 2 / 3, but with its individually adjustable lens compartment ensures a safe place for an additional telephoto, wide-angle or close-up lens. The double zip fastener reliably keeps dust at bay and enables fast access; the hip strap attaches your expensive devices safely onto your hip. Alternatively, Digi Focus 4 can also be attached to your belt or Tec Harness.

Features: All-round padding Adjustable lens compartment Height-adjustable Velcro bridges Double zip fastener Additional hip strap Rain cover Lower flap dust protection Individually adjustable inside pocket Inside lid pocket Outer Velcro pocket **Material:** Textreme 6.6, Snow Crust

	No						
Digi Focus 2	3000	040 black	343 khaki	24 × 18 × 10 cm (inside 24 × 16 × 10 cm)	3 l	350 g	•
Digi Focus 3	3001	040 black	343 khaki	30 × 25 × 13 cm (inside 28 × 17 × 12 cm)	4 l	480 g	•
Digi Focus 4	3012	040 black	343 khaki	31 × 25 × 14 cm (inside 26.5 × 23 × 14 cm)	4 l	580 g	•



1 1 / 040



1,2 1 / 040

Digi Compact M/L Compact photo bag for larger compact cameras or smaller video cameras.

In order to meet the requirements of as many models as possible, Digi Compact comes in two sizes – but is always nice and compact. Digi Compact M is designed for medium-sized devices; the L-version also reliably protects a large compact camera/mini video camera from dust and collisions.

Features: All-round padding Belt holder Shoulder strap Lower flap dust protection Inside lid pocket

Material: Snow Crust

	N°				
Digi Compact M	3013	040 black	17×9×8 cm (inside 15.5×7.5×5.5 cm)	1 l	200 g
Digi Compact L	3014	040 black	17×11×12 cm (inside 14×8.5×9 cm)	1,2 l	240 g



28-210 / 343

28-210 / 040



28-210 / 040

28-210 / 343

80-300 / 040

80-300 / 343



040

Lens Secure 28-210/80-300 Shock-proof protective and carrying case for lenses.

Padded and perfect for the great outdoors: the Lens Secure protective case with integrated dust protection can be safely attached to the waistband system, which also attaches the bag safely to the belt loops – for perfect safety no matter how active you are. For quickly changing lenses up to 120 or 180 mm long and with a diameter of 90 mm.

Features: Padded transport bag Belt attachment Dust protection **Material:** Textreme 6.6

Tec Harness Belt carrying system for photo equipment and other belt bags. Padded multifunctional belt carrying system for attaching camera and accessories bags; rotates against body for easy access. Suitable for all TATONKA bags, Lowe Pro and almost every other belt bag carrying system.

Features: Padding Detachable shoulder strap system Multifunctional attachment of bags for accessories and camera (not included) To match DSLR Pack, a standard DSLR Pack hip strap can also be used D-rings to attach a pulka **Material:** Textreme 6.6

	N°				
Lens Secure 28-210	2994	040 black	343 khaki	Ø 11 × 15 cm (inside Ø 9 cm)	170 g
Lens Secure 80-300	2995	040 black	343 khaki	Ø 11 × 21 cm (inside Ø 9 cm)	200 g
Tec Harness	3010	040 black		80 × 15 × 4 cm	550 g



Digi Zoom Compact photo bag for larger zoom cameras or camcorder plus accessories. Digi Zoom is well equipped to conquer the hearts of photographers: adjustable shoulder strap, variable inside division for different models, fast and easy access to the camera, zip compartments and pockets inside and out for memory cards and other accessories. Of course we don't want to send this much equipment on a journey unprotected. This is why we have equipped Digi Zoom with all-round padding, plus a waterproof zip and lower flap dust protector.

Features: All-round padding Adjustable compartment sizes for different cameras Zip access Lower flap dust protection Inner compartment and outer pocket for memory cards and accessories Zip pocket in the flap Adjustable shoulder strap Handle

Material: Textreme 6.6



Digi Safe Compact photo case with detachable side pocket. Small photo case for compact digital cameras or camcorders. Padded divisible main compartment with zip opening and detachable belt side pocket for a mobile phone – or to follow the trend, for a second camera. The front and inside pockets have plenty of space for memory cards, cables and other accessories, with lid handle, shoulder strap and belt loop Digi Safe is extremely flexible.

Features: Padded main compartment with zip opening Front and inside pocket for memory cards and cables Detachable side pocket for digital camera or mobile phone Shoulder strap Belt loop Rain cover

Material: Snow Crust



	N ^o						
Digi Zoom	3018	040 black	343 khaki	25 × 17 × 13 cm (inside 20 × 16 × 11 cm)	3,5 l	440 g	
Digi Safe	3002	040 black	343 khaki	18 × 15 × 10 cm (inside 16.5 × 12.5 × 6.5 cm)	2,8 l	300 g	•



M / 040



L / 040

M / 343

S / 040

XS / 343



Digi Protect XS/S/M/L Compact photo case to attach to belt in 4 sizes. Padded photo bag with belt loop and shoulder strap. The soft inner lining reliably protects the camera from bumps and shakes. Additional compartments for memory cards round off the Digi Protect series.

Features: Padded belt photo case Robust outer case Soft inner lining Compartments for memory cards Detachable shoulder strap **Material:** Snow Crust

Digi Protect XS	2996	040 black	343 khaki	11×9×7 cm (inside 9.5×6.5×4 cm)	70 g
Digi Protect S	2997	040 black	343 khaki	13×10×7 cm (inside 11×7×4 cm)	100 g
Digi Protect M	2998	040 black	343 khaki	16×11×10 cm (inside 13×9.5×5 cm)	120 g
Digi Protect L	2999	040 black	343 khaki	16×13×12 cm (inside 14×11.5×6.5 cm)	150 g



S / 040



S / 040

M / 040

L / 040

Protection Pouch S/M/L Padded hard foam bag in three sizes and two colours. With an all-round zip and good padding, the Protection Pouch will safely transport delicate but essential items such as GPS, a digital camera, MP3 player or handheld console on a belt. And incidentally, the Protection Pouch isn't only safe when it's closed: two protective wings on the sides also make sure nothing falls out when it is open.

Features: Padded hard foam bag Hypalone belt loop for horizontal or vertical attachment to belt Protective wings on side Mesh insert pocket inside **Material:** EVA, Snow Crust



1 / 022

2 / 088

3 / 022

4 / 040

Neopren Case 1/2/3/4 Practical neoprene belt bag in four formats and three colours. Shock-absorbent protection for your digital camera, mobile phone or spectacles. Cases 1 and 2 have a Velcro mechanism so the bag can be worn both horizontally as well as vertically on a belt or on the shoulder strap of a rucksack. Cases 3 and 4 have an inner compartment e.g. for memory cards or small batteries.

Features 1/2: Bag made of shock-absorbent neoprene Velcro for horizontal or vertical attachment to belt or shoulder strap

Features 3/4: Bag made of shock-absorbent neoprene Inner compartment Zip fastener **Material:** Neoprene



040

088

022

Neopren Zip Bag Universal neoprene belt bag. This zip bag made of neoprene is small and manageable, can be flexibly attached to a belt and reliably protects contents like digital camera, keys or spectacles from knocks and bumps thanks to its material properties.

Features: Robust neoprene bag With belt loop and strong zip fastener **Material:** Neoprene

	N°					N°					
Protection Pouch S	2940	040 black	13 × 8.5 × 3 cm (inside 11 × 7.5 × 2.7 cm)	80 g	Neopren Case 1	2938	022 teak	040 black	088 salsa	12 × 8 × 3 cm	28 g
Protection Pouch M	2941	040 black	14 × 8.5 × 3 cm (inside 12 × 7.5 × 2.7 cm)	85 g	Neopren Case 2	2939	022 teak	040 black	088 salsa	15 × 7 × 3 cm	30 g
Protection Pouch L	2942	040 black	18 × 12 × 7.5 cm (inside 14.5 × 8.5 × 5 cm)	100 g	Neopren Case 3	2934	022 teak	040 black	088 salsa	11,5 × 6,5 × 2,5 cm	25 g
					Neopren Case 4	2935	022 teak	040 black	088 salsa	13,5 × 7 × 2,5 cm	30 g
					Neopren Zip Bag	2933	022 teak	040 black	088 salsa	15 × 8 × 4 cm	60 g

Which models fit into which Mobile Case?



Mobile Case Micro/XXS/XS/S/M/L

Strong belt pocket for mobile phones and GPS devices. Offering effective, all-around padded protection from shocks and blows, they come in six sizes for different types of devices.

Features: □ Hypalone loop on the back for vertical or horizontal (for HGV drivers) attachment to belt □ Six sizes □ All-round padding **Material:** Texamid 5.5 padded

	Nº	Color	Dimensions (HxBxT)	Weight
Mobile Case Micro	2150	040 black	11 × 6,5 × 2,5 cm	30 g
Mobile Case XXS	2151	040 black	11 × 5 × 2,5 cm	22 g
Mobile Case XS	2152	040 black	12 × 5 × 2,5 cm	26 g

Mobile Case Micro Inner dimensions (HxBxT) 110×65×25 mm		Mobile Case XS Inner dimensions (HxBxT) 120×50×25 mm	
Brand:	Models:	Brand:	Models:
Asus	P552w, P565	Hewlett-Packard	iPAQ Voice Messenger
Blackberry	Curve 8520, Curve 8900	HTC	S740
Gigabyte	GSmart t600	Motorola	ZN5
LG	GD900 Crystal, GT505, KB770, KC910 Renoir, KM900 Arena, KP500, KU990 Viewty, Prada-Phone	Nokia	5220 Xpress-Music, 5630 Xpress-Music, 6720 Classic, E75, N78, N82
Motorola	V3	Samsung	B2100, B2700, C5212, i7110 Pilot M7500 EA, M7600 Beat DJ, S7220 Ultra Classic
Nokia	N900, N95, N96		
Palm	Treo 500		
Samsung	Corby S3650, I8510 Innov8, i900 Omnia, Jét S8000, M8800 Pixon, Pixon12, S5230 Star, S5600, S8300 Ultra Touch, SGH-F480		
Sony Ericsson	Xperia X1		
Mobile Case XXS Inner dimensions (HxBxT) 110×50×25 mm		Mobile Case S Inner dimensions (HxBxT) 130×50×25 mm	
Brand:	Models:	Brand:	Models:
Blackberry	Pearl Flip	LG	BL40 New Chocolate
LG	BL20 New Chocolate, GC900 Viewty Smart	Nokia	6310
Motorola	Aura		
Nokia	1661, 1662, 1680, 2330 Classic, 2700 Classic, 3110 Evolve, 5130 Xpress-Music, 5320 Xpress-Music, 6124 Classic, 6210 Navigator, 6220 Classic, 6303 Classic, 6650, 6700 Classic, 6710 Navigator, 8800 Carbon Arte, E66, N79, N85, N86, X3		
Samsung	SGH-U900 Soul		
Simvalley Mobile	SX-330		
Sony Ericsson	C510, C702, C901 Green-Heart, C903, C905, G502, G705, J132, K850i, W595, W705, W760i, W902, W995		
Mobile Case M Inner dimensions (HxBxT) 140×60×30 mm		Mobile Case L Inner dimensions (HxBxT) 170×60×35 mm	
Brand:	Models:	Brand:	Models:
Garmin	eTrex Venture Cx, Garmin eTrex Vista Cx	Garmin	GPSMap 60CSx
Nokia	E90		

	Nº	Color	Dimensions (HxBxT)	Weight
Mobile Case S	2153	040 black	13 × 5 × 2,5 cm	28 g
Mobile Case M	2154	040 black	14 × 6 × 3 cm	32 g
Mobile Case L	2155	040 black	17 × 6 × 3,5 cm	40 g